



Kavinci Motors
54 Lakewood Blvd Carrumdowns
Victoria, 3201
Melbourne, Australia

(03) 8595 0922
support@kavincimotors.com

Maintenance Notice


Dear Customers,

Please ensure that all connectors and plugs on your jet ski are checked regularly for correct fitment and have a sufficient amount of dielectric grease inside the plug and the back of the connector. Please see the attached instructions on how to do so. This will help prevent any premature failure of components.

Regards
The Kavinci Motors Team

Step 1.

Gently remove the rear seal, being careful not to pierce or damage the rubber. Slide the rubber up the wires and fill the rear of the plugs with dielectric grease. Replace the rubber seal. You should see some grease push out with the pressure of the seal.

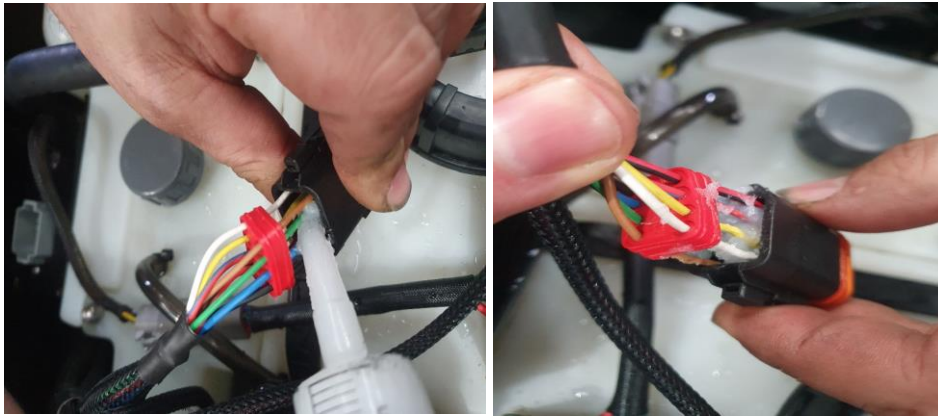

Step 2.

Gently remove the wedge from the connector, exposing the inside of the plug. Fill this area with dielectric grease and then replace the wedge. Be sure to pay attention to the configuration before removing.



Step 3.

Cover the seal on the plug and push in gently with your finger. Then add a small amount of grease to the inside of the plug. If too much is added the plug may not seat and click into place correctly. If this happens, remove a small amount.

